




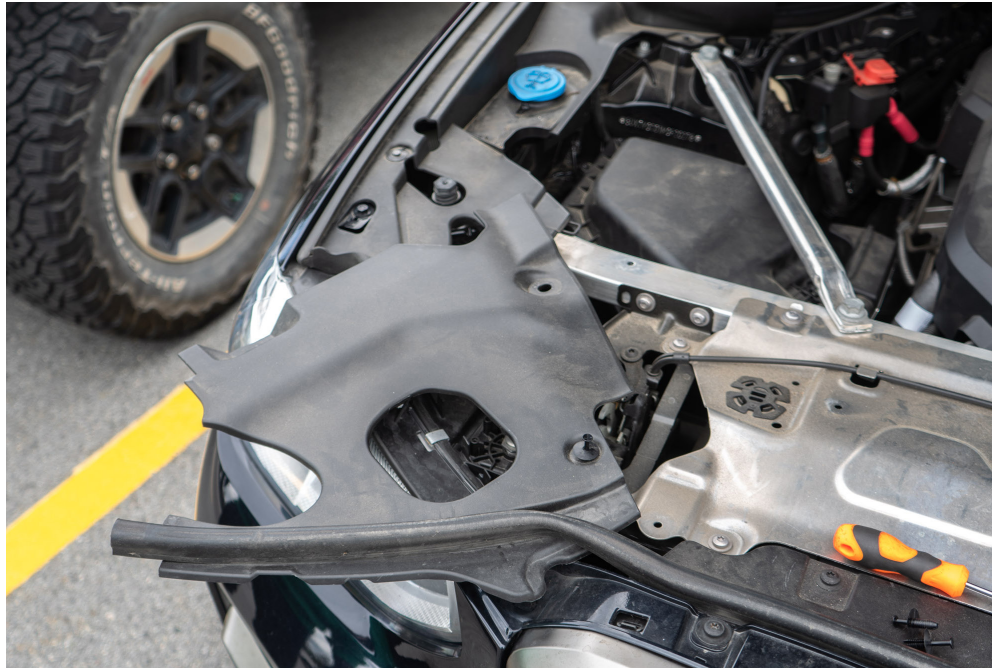

**STEP 1**

Remove the plastic cover

**STEP 2**

Remove the strut brace.



### STEP 3

Disconnect the MAF electrical connector




### STEP 4

Loosen both clamps that join the intake resonator to the intake pipe.



## STEP 5

Loosen the clamp attaching the intake pipe to the airbox and remove.

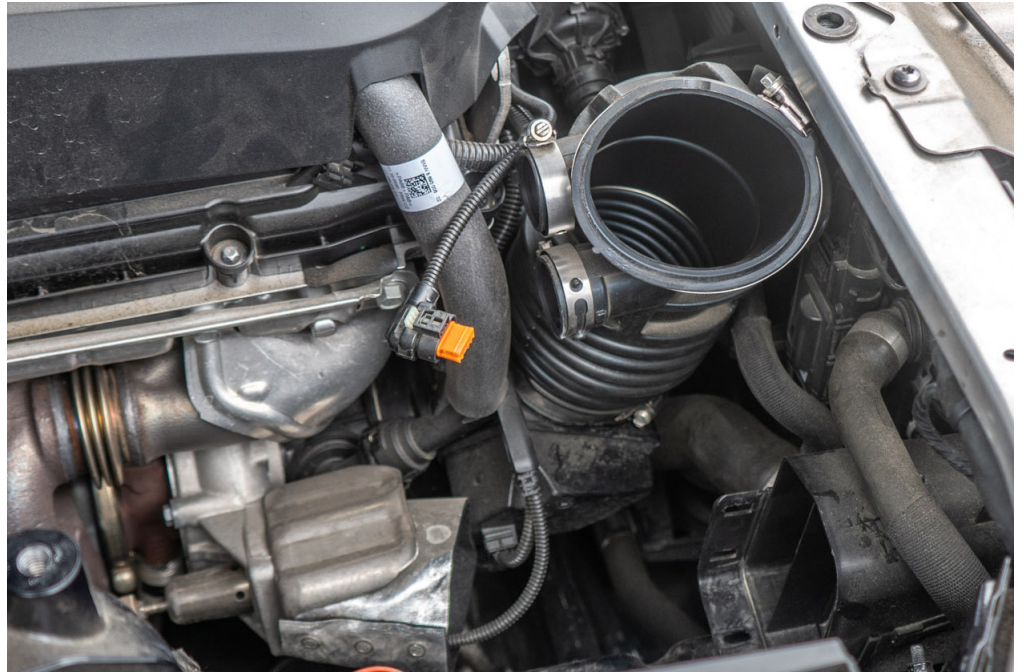

## STEP 6

Remove the intake pipe.



## STEP 7

Assemble the heat shield and weather stripping as shown.



## STEP 8

Install the provided silicone and clamps.

We suggest you tighten the lower clamp now.




**STEP 9**

Place the heat shield in the engine bay for now.

**STEP 10**

Slide the CTS intake pipe through the heat and install on to the silicone.

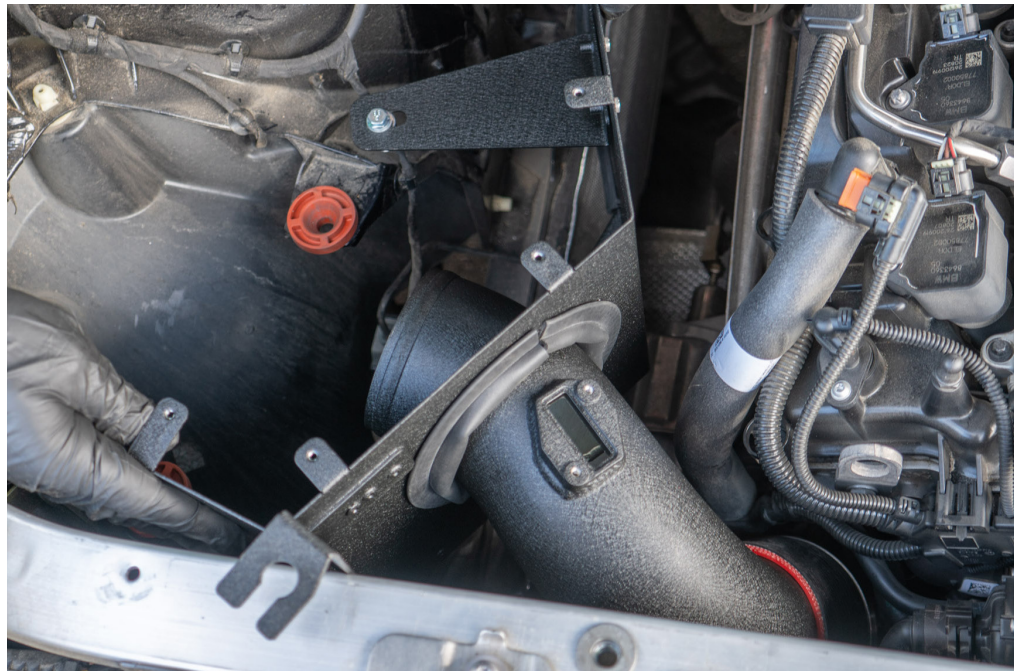


## STEP 11

You can now set the heat shield in place.


Line up the post and install.

Align bracket with chassis and tighten the bolt.

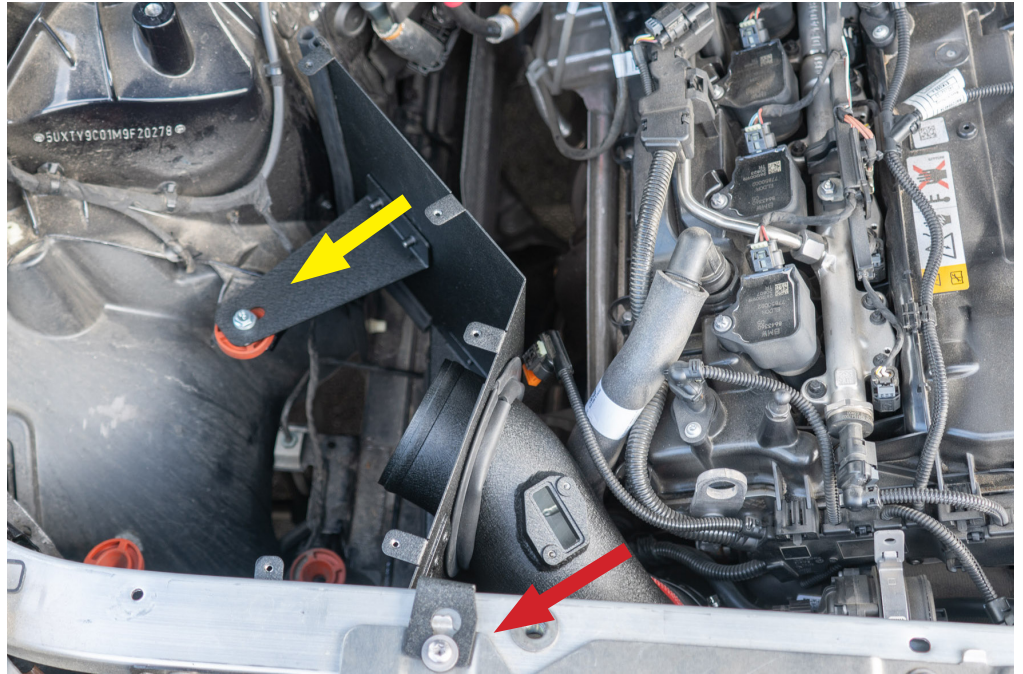


## STEP 12

Install the filter and tighten.

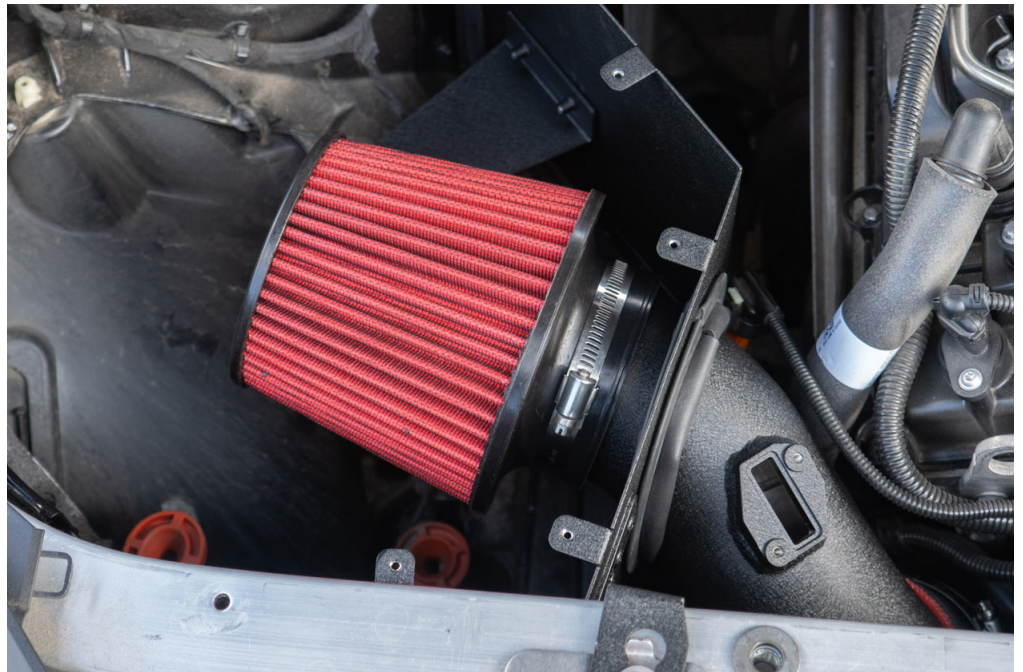

## STEP 13

Install the airbox lid

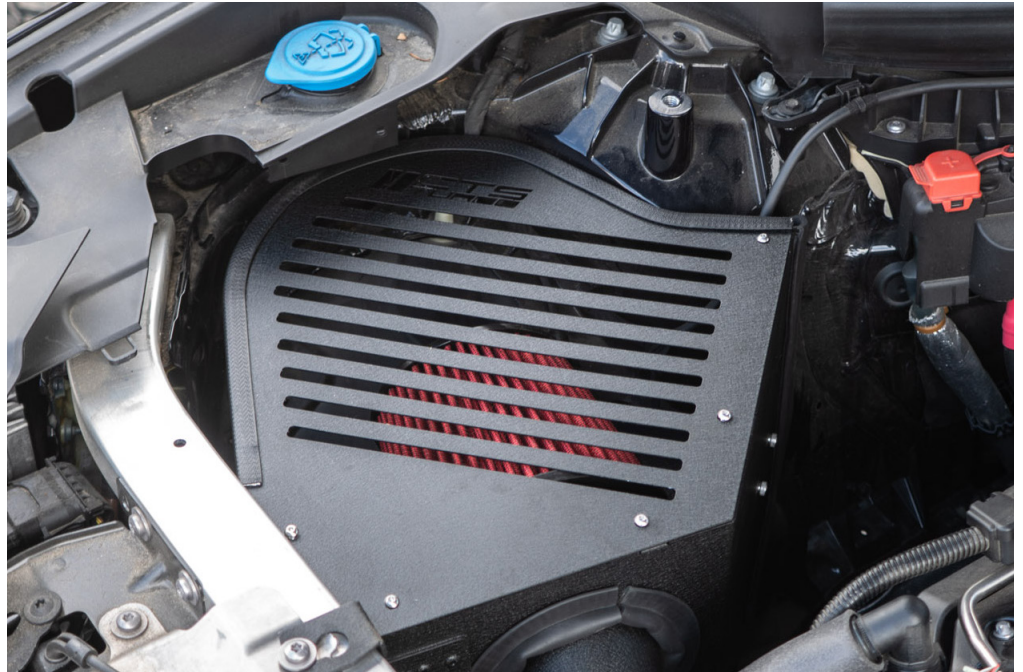

## STEP 14

Swap the intake sensor from the OEM airbox into the CTS intake pipe.

Use the provided bolts.



## STEP 14

Reinstall the strut brace and plastic cover and you are done.

