



## INSTALLATION GUIDE

CTS TURBO MK7/8V MQB AWD REAR SWAY BAR UPGRADE  
CTS-SUS-0008R



## WHAT IS INCLUDED

1. Anti-Roll Sway Bar
2. Teflon lined Bushings



## NOTES

Always make sure the car is safe to work on. Do not work on a hot motor.

## STEP 1

Using a lift or jacks get the vehicle into the air.

Remove the ride height leveling sensors. We chose to remove the bracket rather than popping the link off.



## STEP 2

Support the vehicle and remove the sway bar link bolts



### STEP 3

Next remove the mounting brackets holding the sway bar and bushing.



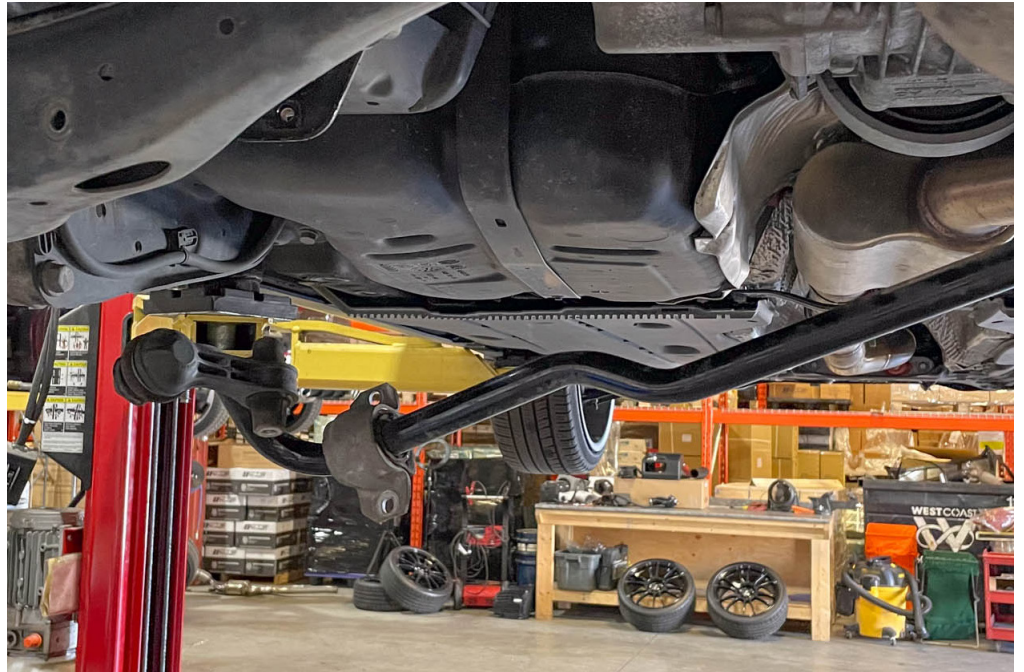
### STEP 4

We suggest dropping the exhaust a little but to help with space on removal.



**STEP 4 cont.**

Remove the sway bar.

**STEP 5**

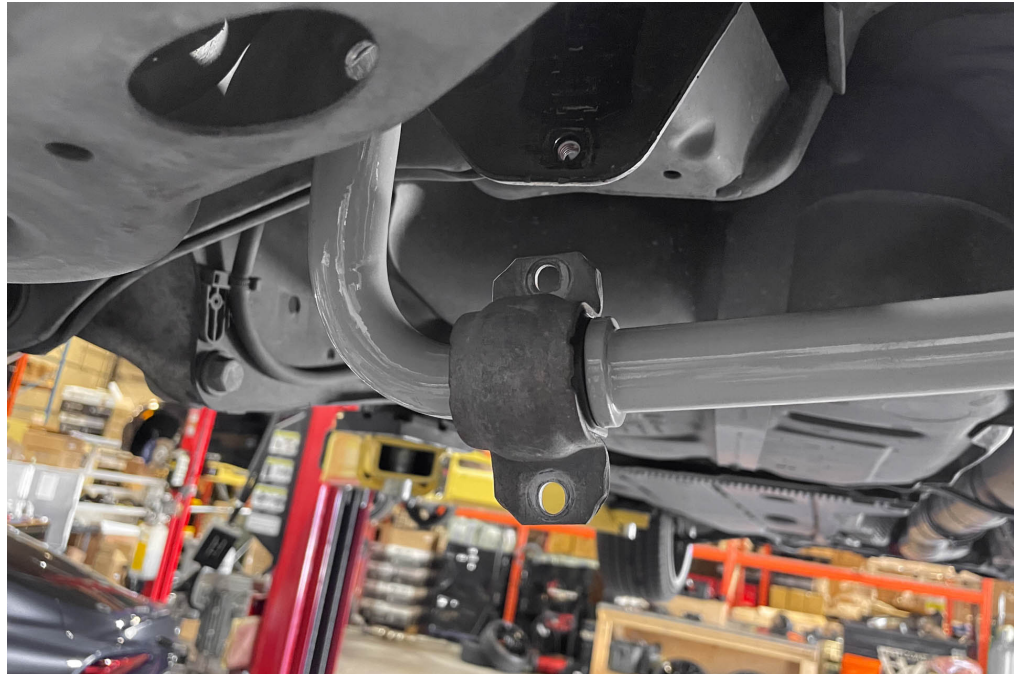
Install the provided bushings onto the CTS sway bar.

Reinstall the OEM end links now.



**STEP 6**

Install the CTS sway bar.

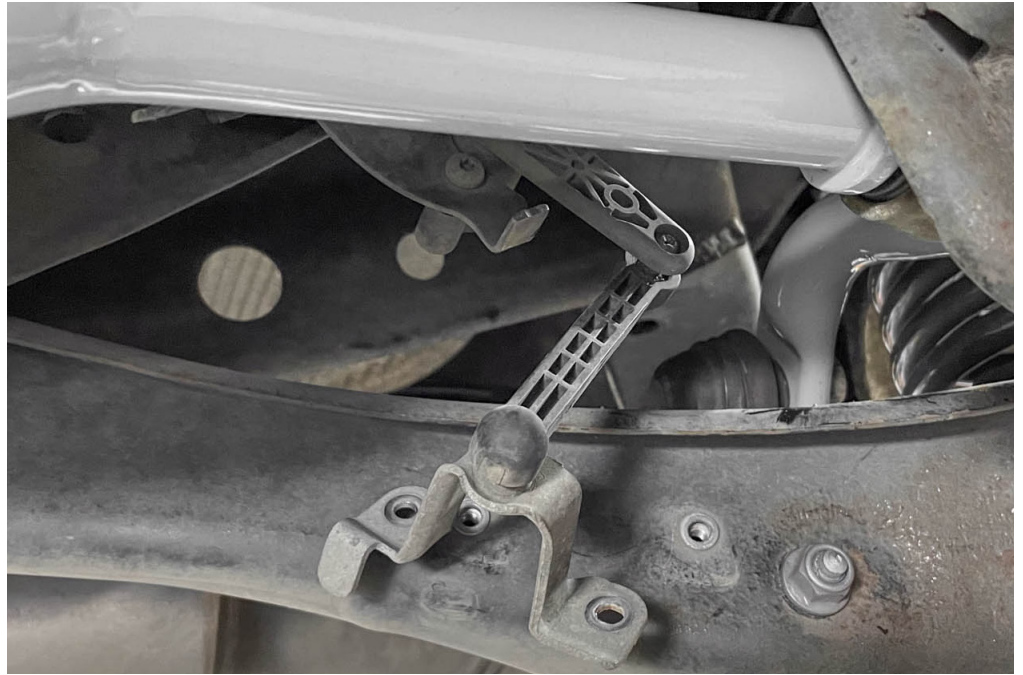
**STEP 7**

Reinstall the mounting bracket  
way bar bushings.

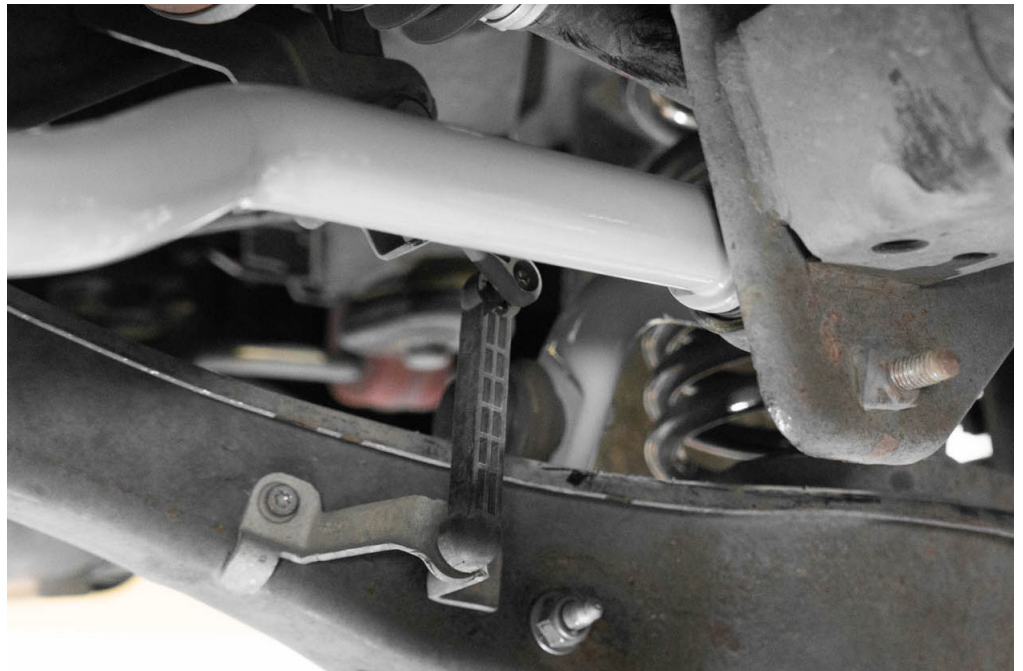


**STEP 8**

Install the sway bar end links bolt and nut.

**STEP 9**

Install the ride height leveling sensor bracket.



**STEP 10**

Thats it you are done!.

