



INSTALLATION GUIDE

TMD for B9.5 Audi A4, A5, A6 and Q5 2.0T (2020-2024)

CTS-HW-532



WHAT IS INCLUDED


1. Turbo muffler delete

NOTES

Always make sure the car is safe to work on. Do not work on a hot motor.


STEP 1

Remove the Torx bolts securing the OEM turbo muffler.

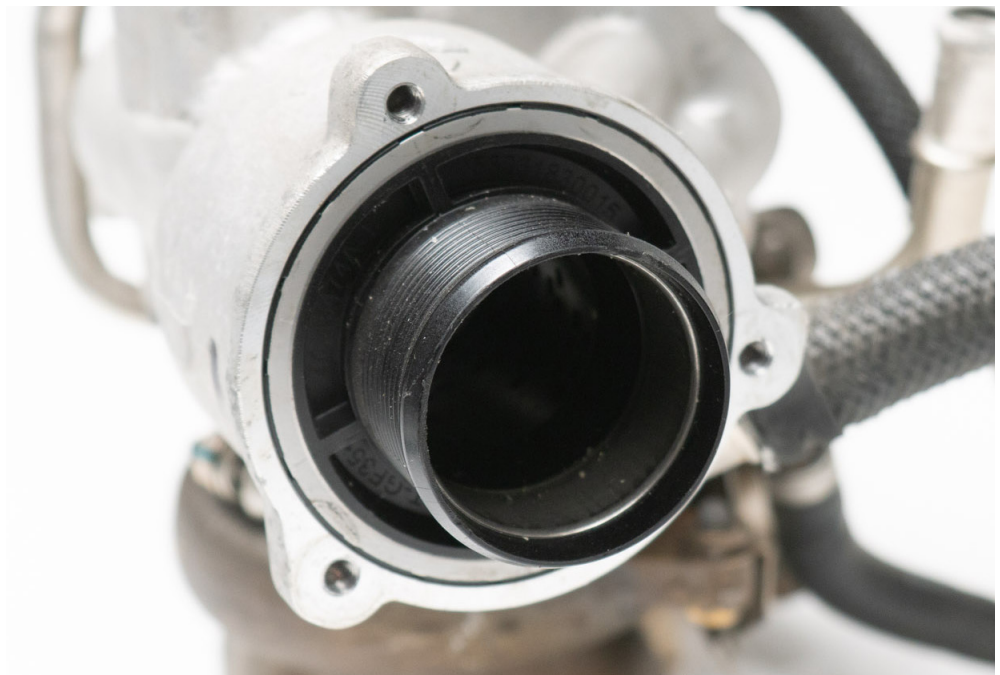

STEP 2

Remove the OEM muffler

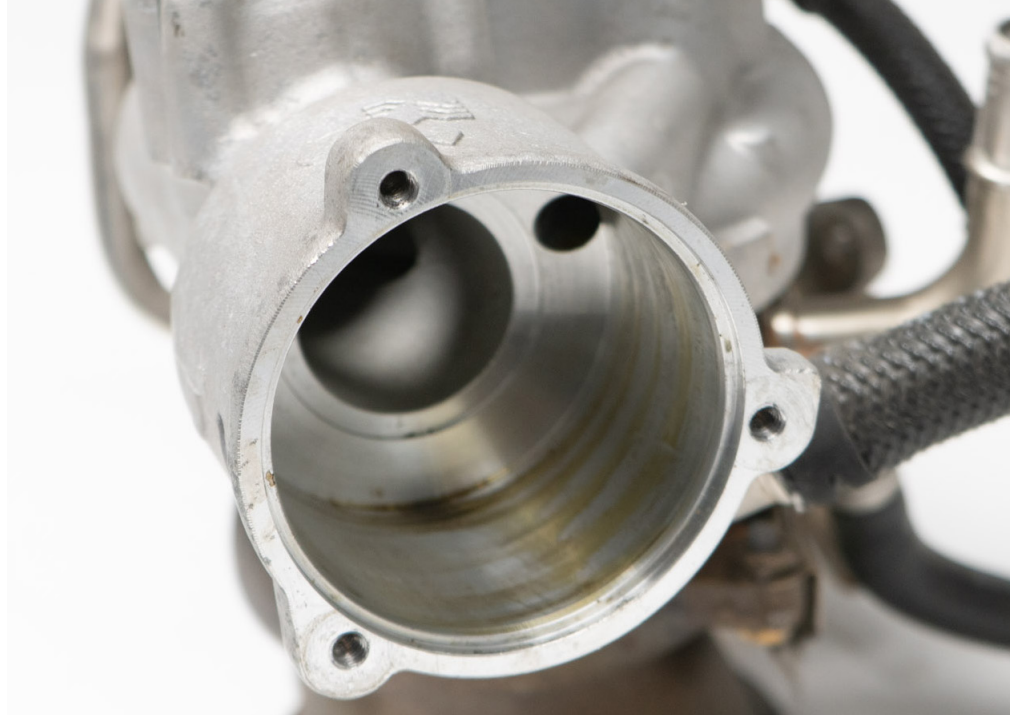

STEP 3

When installing the CTS turbo muffler delete it is important to ensure the indicator lines up with the hole on the inside of housing.



STEP 4

Reinstall the Torx bolts and you are done.

